

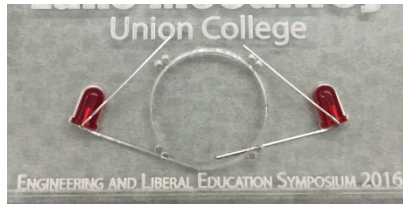


NAME TAG ASSEMBLY INSTRUCTIONS

1. BEND THE LEGS OF EACH LED 90° IN OPPOSITE DIRECTIONS.

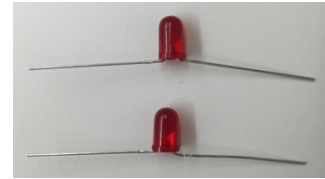

2. INSERT THE LEDs (WIRE FIRST) WITH THE FLAT SIDE TOWARD THE BACK INTO THE HOLES & BEND THE WIRE TO HOLD IN PLACE.



3. CREATE A CROSS-WIRE ON THE BACK SIDE BY THREADING WIRE THROUGH THE TWO OPPOSITE PAIRS OF HOLES AND TWISTING TIGHT. IF THE WIRE IS LONG ENOUGH MAKE A FULL LOOP AND TWIST TIGHT AT ONE END.





5. PLACE THE BATTERY IN THE HOLE ON TOP OF THE CROSS-WIRE.



4. REPEAT THE WIRING PROCESS ON THE FRONT AS DONE BEFORE.

****USE WHATEVER TECHNIQUE NECESSARY TO PROVIDE BEST CONNECTION****

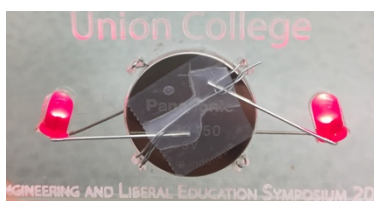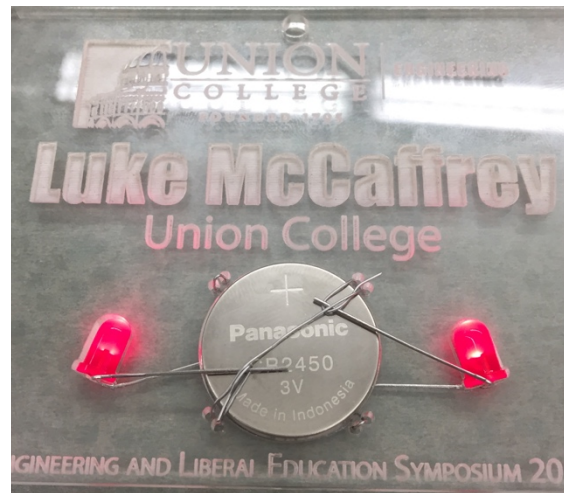

TIP: ADD A PIECE OF TAPE IF A GOOD CONNECTION CANNOT BE ACHIEVED.

